

 
BAE SYSTEMS

BAe 146 SERIES/AVRO 146-RJ SERIES AIRCRAFT MAINTENANCE MANUAL


On aircraft ALL

WARNING: CHECKS OR ADJUSTMENTS TO INBOARD ENGINES SHOULD ONLY BE CARRIED OUT WHEN OUTBOARD ENGINES ARE AT IDLE POWER OR SHUT DOWN

AIRCRAFT	DIMENSION A	
	FT. IN.	METRE
BAe 146-300 SERIES / AVRO RJ 100/115	14- 2	4.76
BAe 146-200 SERIES / AVRO RJ 85	9- 9	2.92
BAe 146-100 SERIES / AVRO RJ 70	6- 2	1.87



DANGER AREA

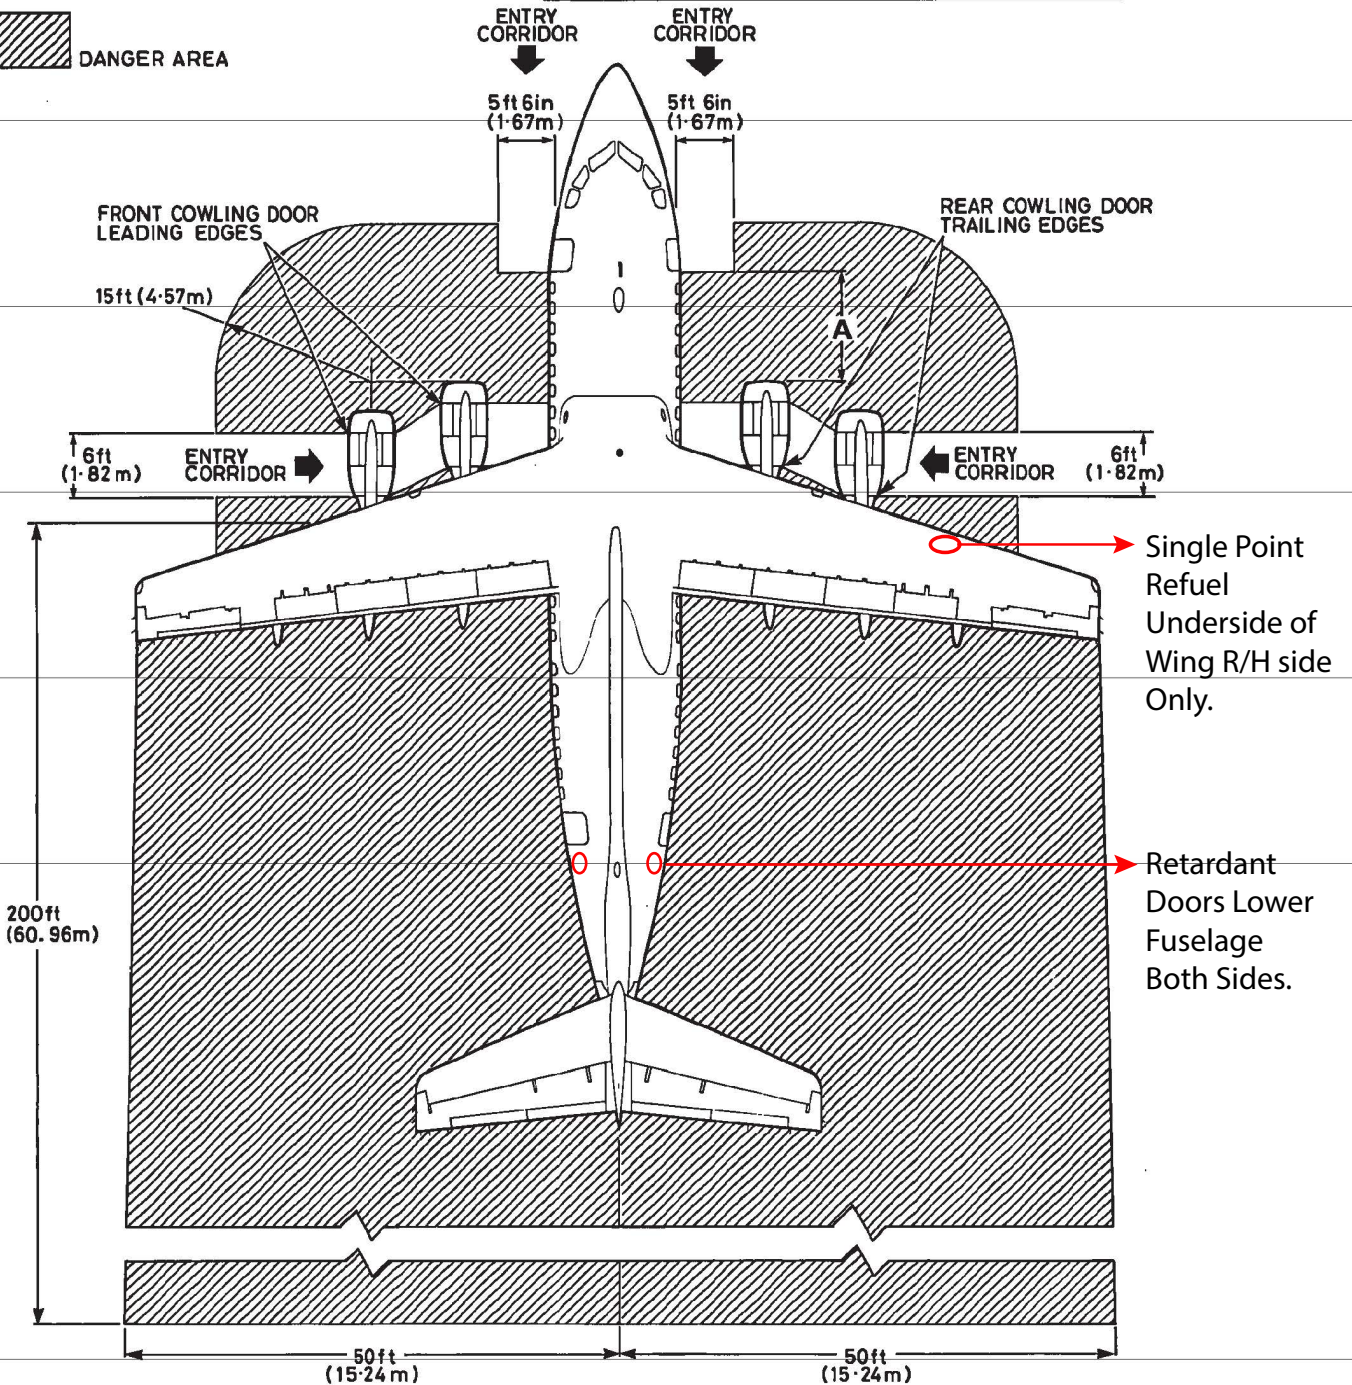

V10436_5

Danger zones and entry corridors
Fig.501

V10436_5

71-00-00